

Keet/Tiel Offset Roof

Model: # 25211

Instructions online at www.prevuepet.com

read first REVIEW BEFORE ASSEMBLY

- No tools are required for assembly
- For best results, follow the Steps in the order they are presented


For assistance or replacement parts, please contact Prevue Pet Products:

PHONE 312.243.3624

ONLINE www.prevuepet.com

EMAIL customerservice@prevuepet.com


1 To assemble the **CAGE BODY**, you will need these pieces:

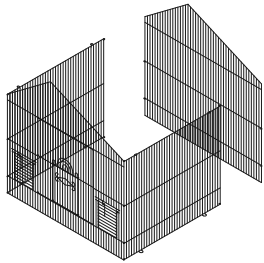


Attach the back panel to the three-panel mesh:

Start in the lower corner. Catch the extended hooked wire from the side panel onto the back panel (fig.1.1), then weave the hooked wires of the two panels together, up the seam, to the top (fig.1.3).


Repeat the method with the other seam.

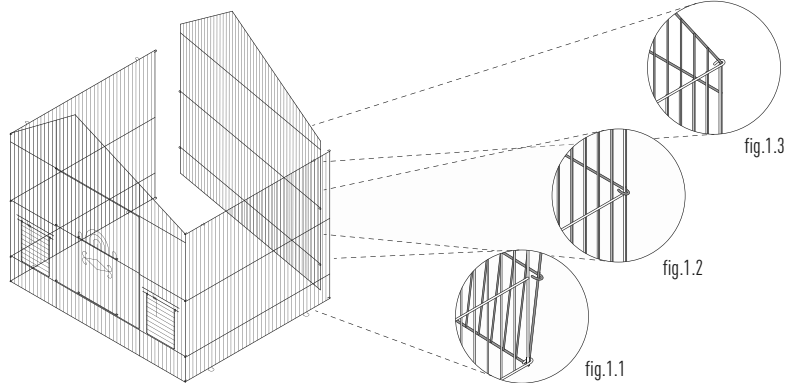


2 To add the mesh body to the **BASE**, you will need these pieces:

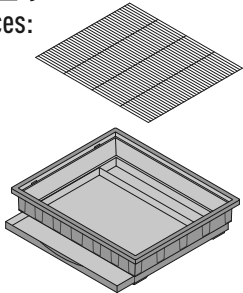


Set the grille into the base. Slide the tray fully into the base.

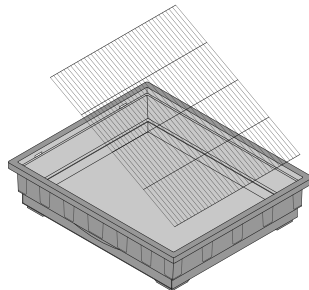



Set the assembled mesh into the base. Guide the loops on the side panels into the holes along the lip of the base.

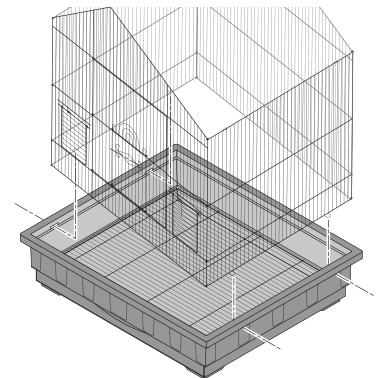


3 To add the **ACCESSORIES**, you will need these pieces:

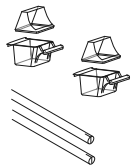



Assemble the two-piece cups, open the cup doors and insert the cups perch-first.

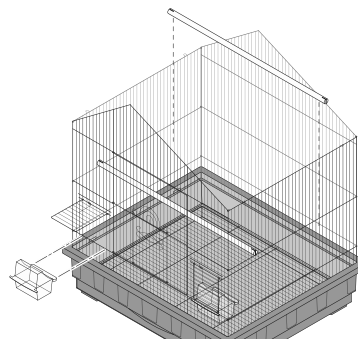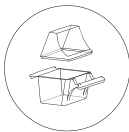

Insert the perches on a vertical wire, resting on a horizontal wire for stability.

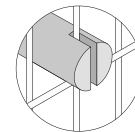

4 To add the **ROOF**, you will need this piece:

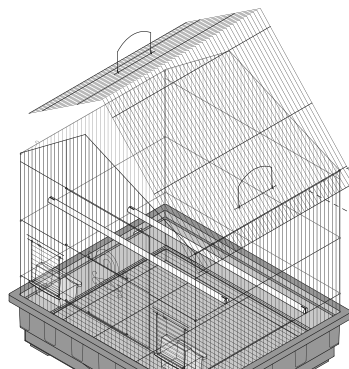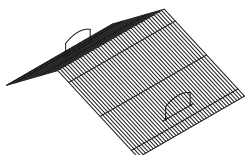

Start at one end. Catch the inset horizontal wire on the roof mesh under the loops on the side panel.

Finish by catching the roof onto the loops on the other end.

