


TOOLS NEEDED (no tools are included) : • Slotted or phillips head screwdriver • Crescent wrench


## 1 PIECES

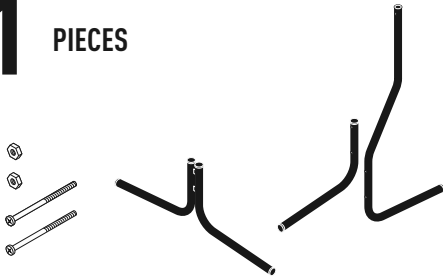

## 2 PIECES



## 3 PIECES

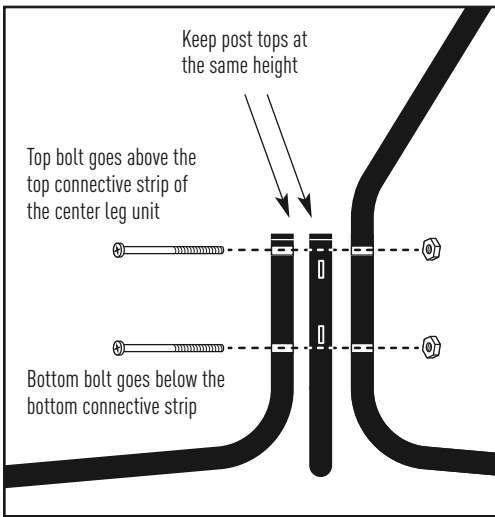

CUT-AWAY VIEW

Insert post

1

Align holes,  
insert short screw,  
secure with bolt

2



Assembly completed. ■