

**KEY:**

DA = Day Bed  
SP = Spire  
P = Post  
PL = Platform  
HT = Hideaway Top  
HM = Hideaway Mid-floor  
HP = Hideaway Post  
HB = Hideaway Base  
HC = Hideaway Cover  
BA = Base

**HARDWARE INCLUDED:**

Phillips-head Screw  
12 pieces



Washer  
1 piece



Short Hex Screw  
2 pieces




Medium Hex Screw  
1 piece



Long Hex Screw  
2 pieces



Screw Posts  
3 pieces (short)  
2 pieces (long)

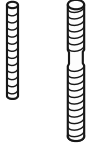


**TOOLS:**

Hex Key included



Phillips-head screwdriver or drill  
with phillips bit not included

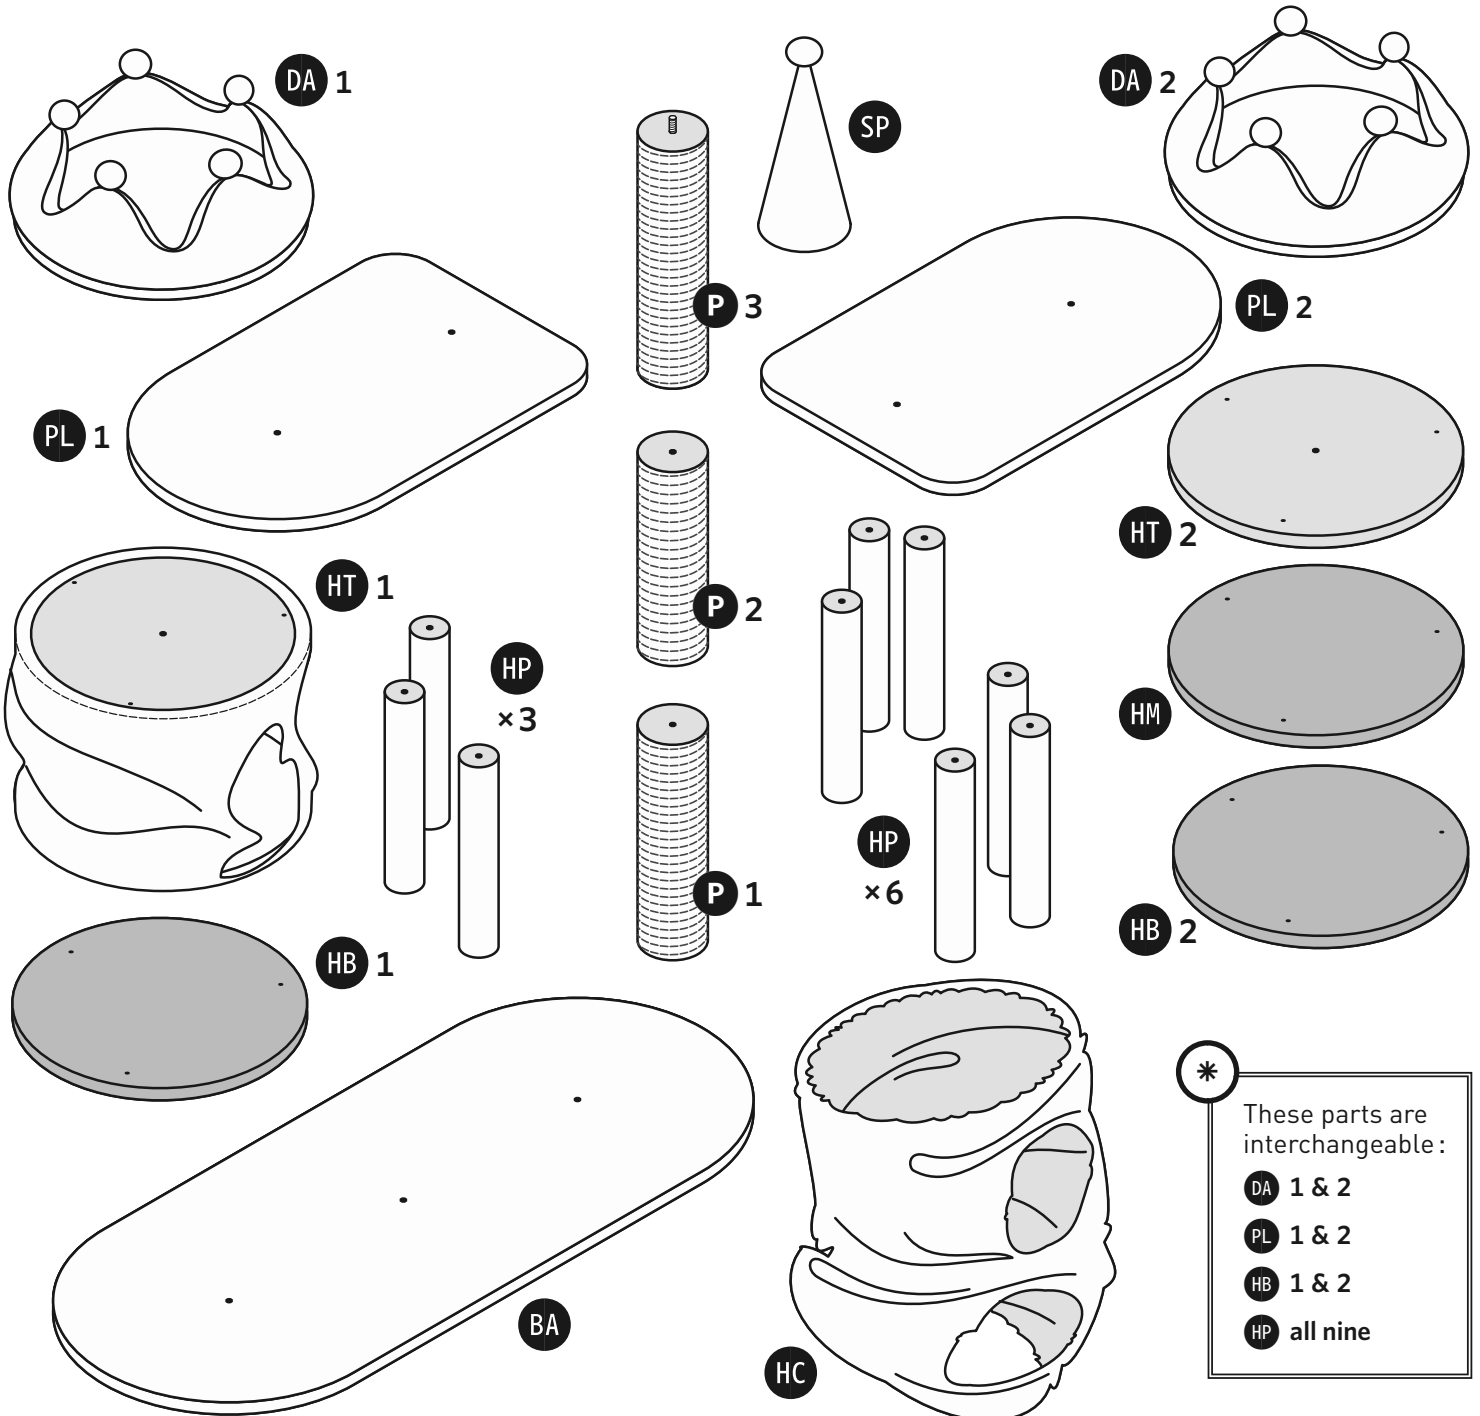

TOOLS REQUIRED: Hex Key (included) & Phillips-head Screwdriver (not included) • Follow the Assembly Steps in the order presented.



## HOW TO TELL THE DIFFERENCE

Several parts and panels may look similar. Here is how to tell the difference:

### SCRATCHING POSTS

**Top post.**  
This post is the only one with an integrated screw post.

**P 3**

**P 2**

**Middle post.**  
This post will be installed between the two platforms.



**P 1**

**Bottom post.**  
This is the first post you will install.

### SINGLE HIDEAWAY

**Hideaway Top #1**  
The hideaway cover has been pre-glued to this roof panel.

**HT 1**

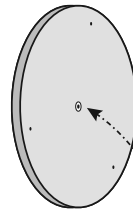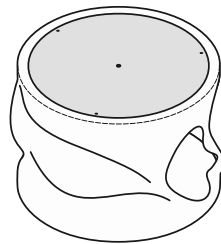

### TWO-STORY HIDEAWAY

**Hideaway Top #2**  
This roof panel is unfinished. It has no fabric and no attached cover.

**HT 2**

**Hideaway Mid-Floor.**  
The same as the base, except no center hole when flipped over.

**HM**


**HB 1**

**HB 2**


**Hideaway Base #1 & #2**  
These bases are the same. They have fabric on the top and sides. When turned over, there will be a threaded screw hole in the center of the panel.

## 1 PIECES

× 6

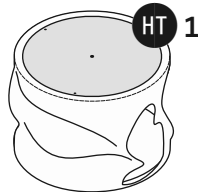


**HT 1**

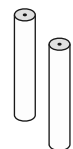

**HP**

× 3







interchangeable



**HB 1**



**REQUIRED:**  
Phillips-head  
screwdriver

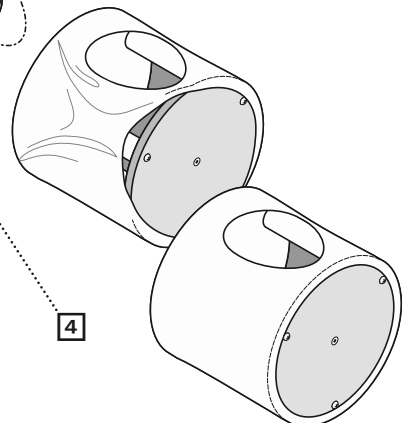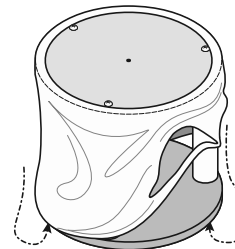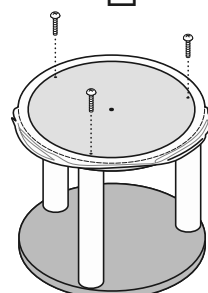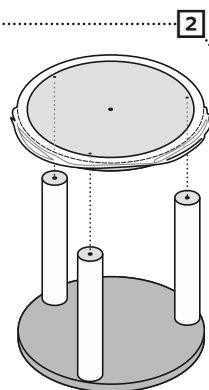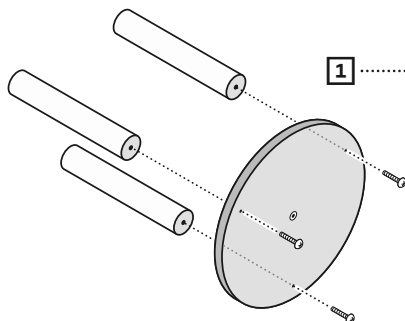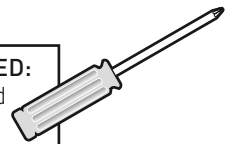

- 1 Affix three **hideaway posts** to the **hideaway base** with phillips screws.
- 2 Scrunch up the cover on the **hideaway top** panel and set it over the posts.
- 3 Affix the top to the posts with phillips screws.
- 4 Pull the **cover** down until it overlaps the lip evenly around the base.

## 2 PIECES

× 6  
× 3

HT 2

HM

HB 2


HP  
× 6

interchangeable

HC



- Affix three **hideaway posts** to the **hideaway base** with phillips screws.
- Screw the short **screw posts** about  $\frac{1}{3}$  deep into the end of each hideaway post.
- Place the **hideaway mid-floor panel** over the exposed screw posts.
- Twist three **hideaway posts** over the exposed screw posts until snug.
- Affix the unfinished **hideaway top** to the posts with phillips screws.
- Pull the loose **cover** down over the assembled structure. Stretch it until it overlaps the top and bottom lips. Adjust the cover until the openings are oval and it is evenly overlapping the roof and base.

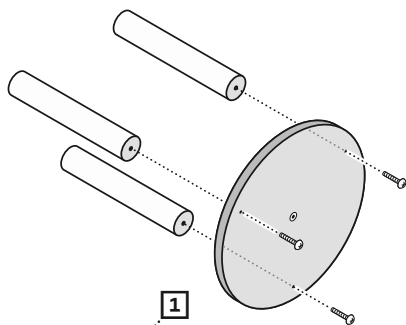

1







2

3

4

5

6

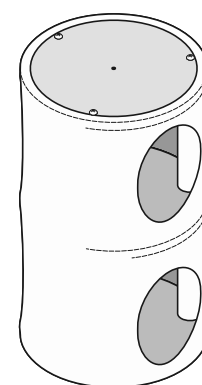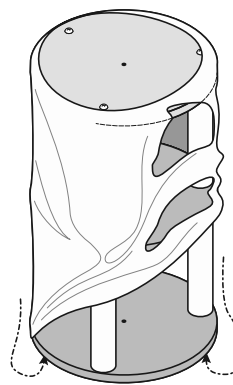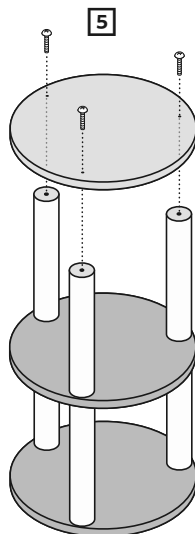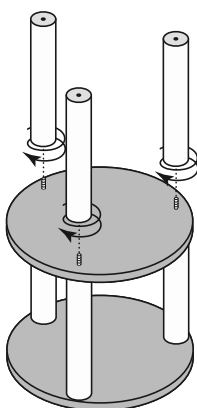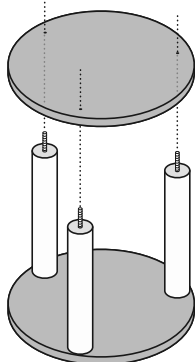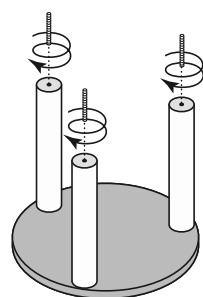

## 3 PIECES

× 2  
short

× 1  
long




× 1  
mid-length

× 1

BA

P 1

(assembled)

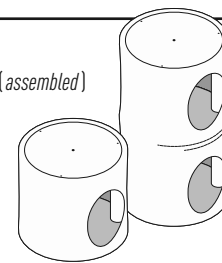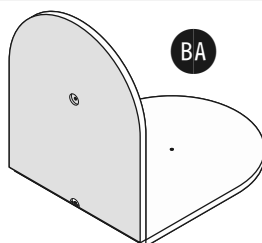


Lay the pieces on their sides.

- Affix the assembled hideaways to the **base** with the shortest hex screws.
- Affix the hideaway-height **scratching post** at the center fold, with a washer and mid-length hex screw.

Set the unit upright.

Twist a large **screw post** into the end of the scratching post.

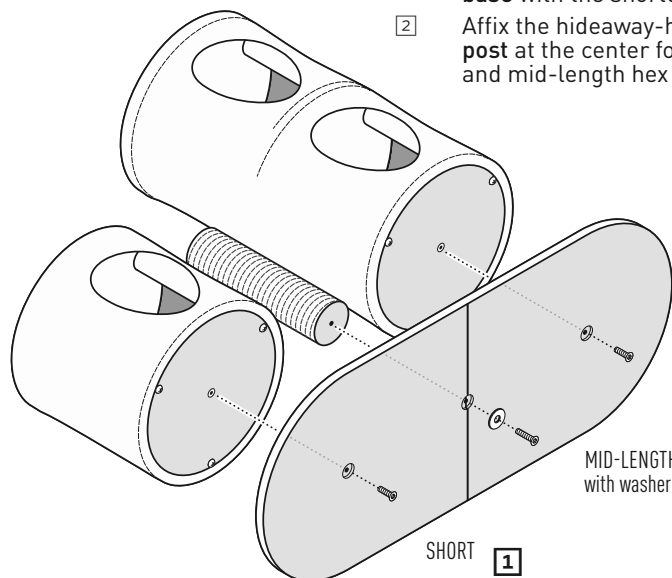

1




SHORT

MID-LENGTH  
with washer



2

SHORT


1

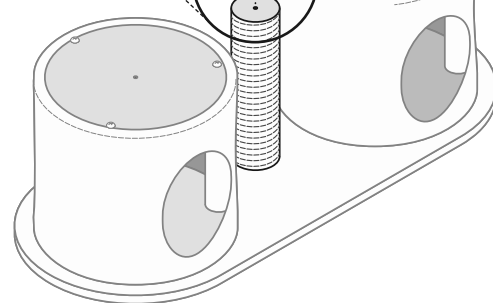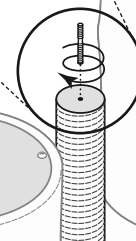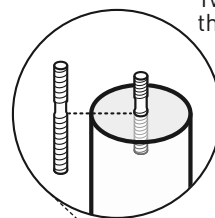


# 4 PIECES

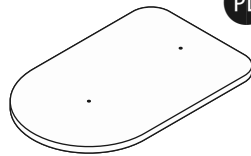


PL 1

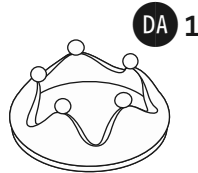


DA 1

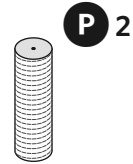


P 2

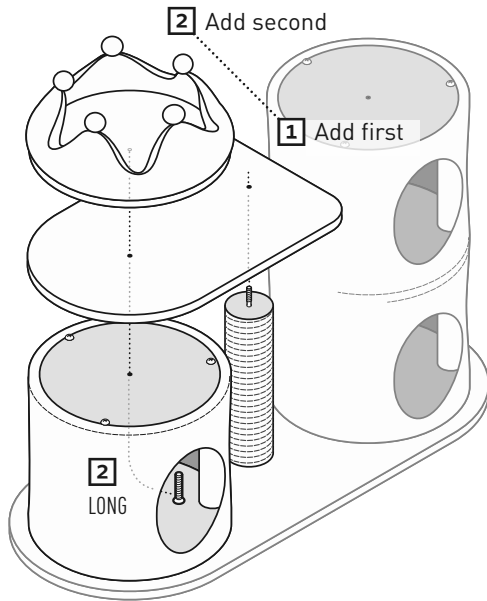


- 1 Add the **platform** over the screw post and the hideaway.
- 2 Affix the **day bed** in place with a long hex screw up through the hideaway and platform.
- 3 → Twist the **scratching post** onto the exposed screw post.
- 4 Twist a large **screw post** into the end of the scratching post.

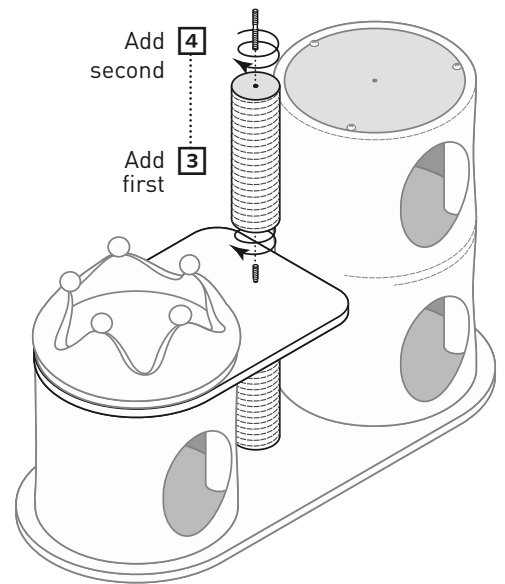


# 5 PIECES

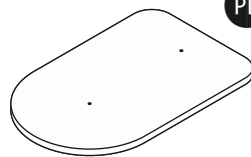


PL 2

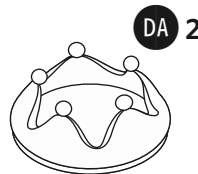

DA 2

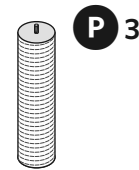


P 3


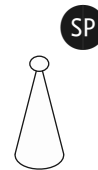


SP

- 1 Add the **platform** over the screw post and the two-story hideaway.
- 2 Affix the **day bed** in place with a long hex screw up through the hideaway and platform.

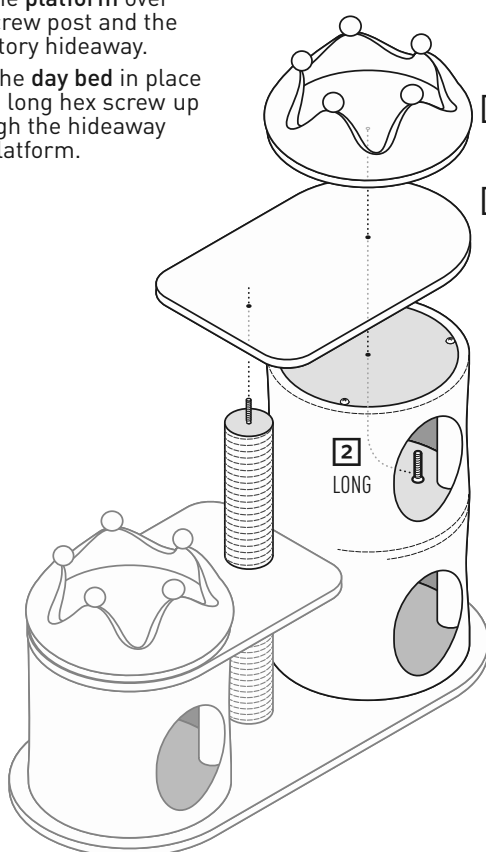

- 3 Twist the **scratching post** onto the exposed screw post.
- 4 Twist the **spire** onto the exposed screw post.

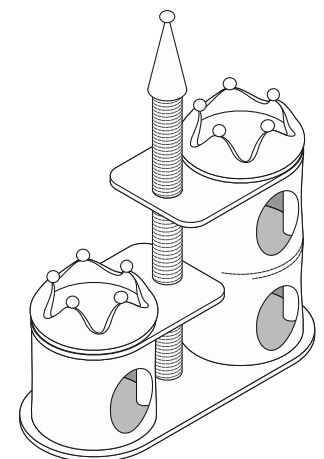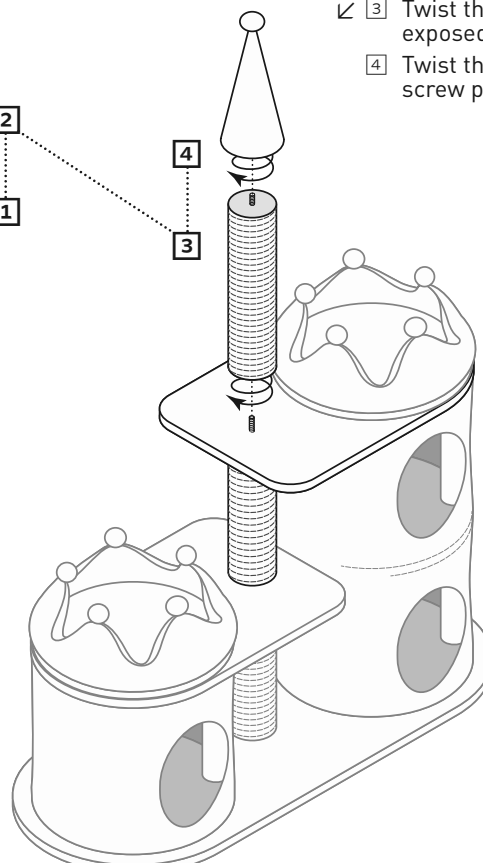

Assembly completed.