

KEY:

DA = Day Bed

SP = Spire


P = Post

PL = Platform

HI = Hideaway

HP = Hideaway Post

BA = Base

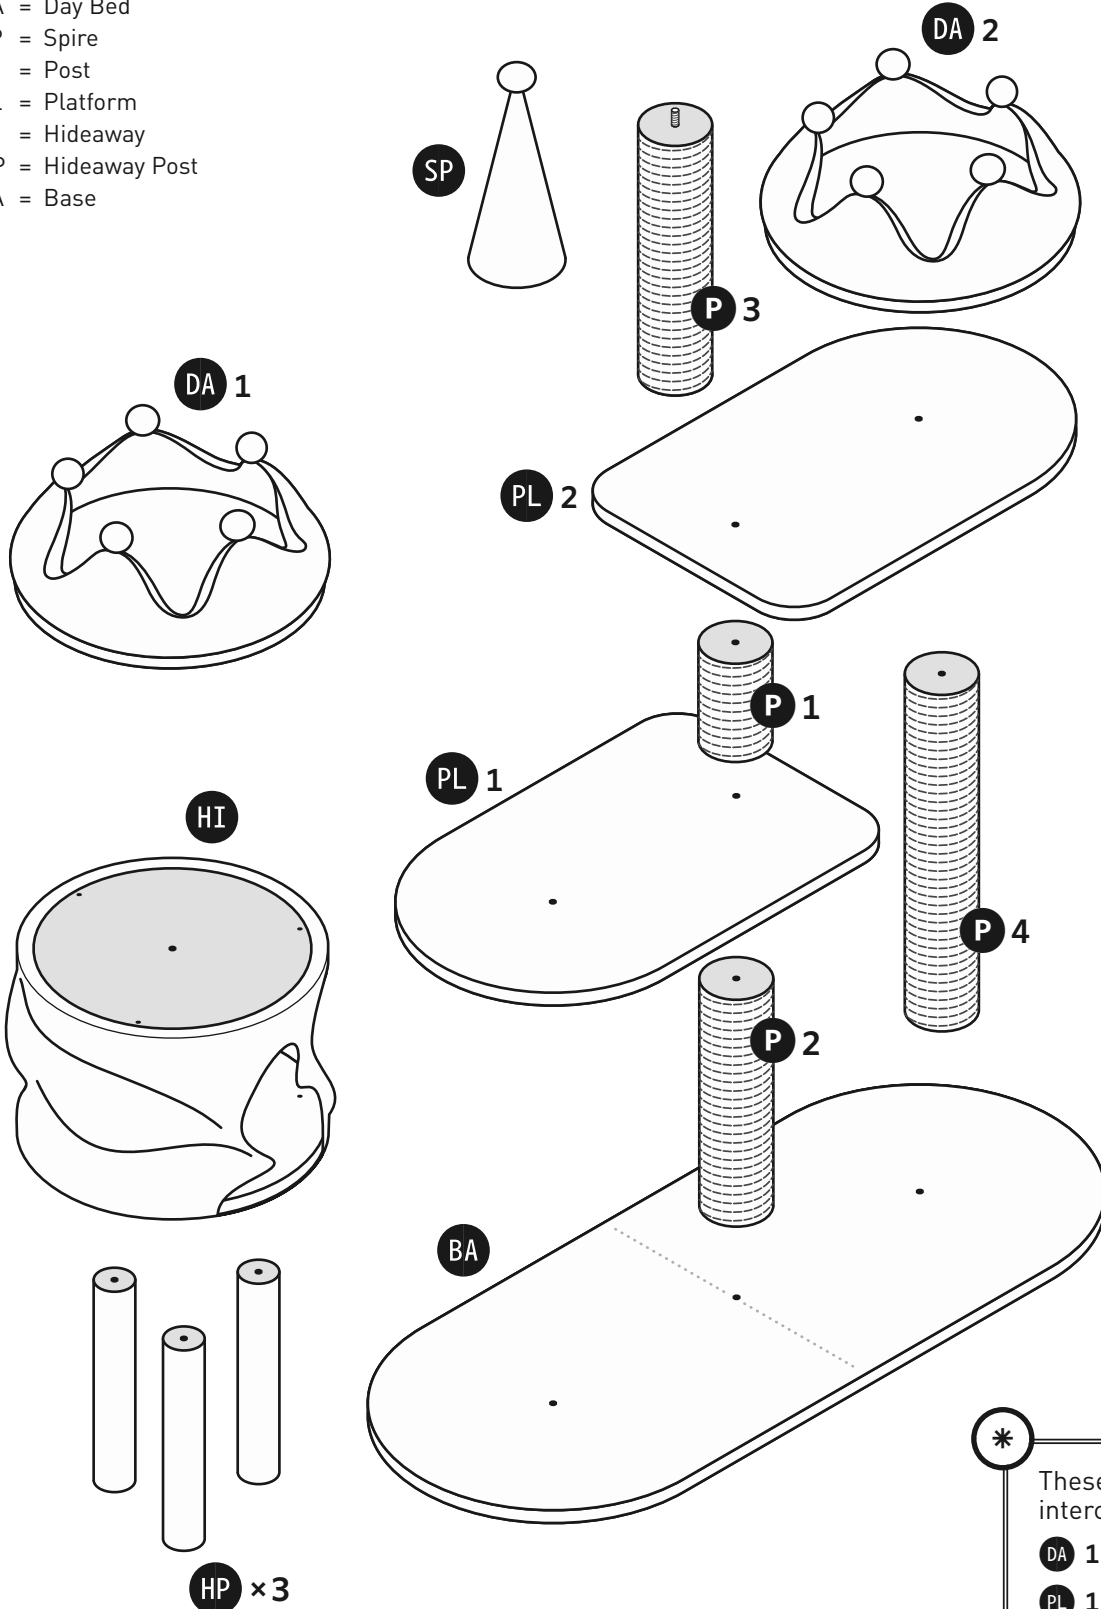

HARDWARE INCLUDED:



Phillips-head Screw
6 pieces



Washer
1 piece



Short Hex Screw
1 piece



Medium Hex Screw
2 pieces



Long Hex Screw
1 piece



Screw Post
3 pieces


TOOLS:

Hex Key



included

Phillips-head
screwdriver

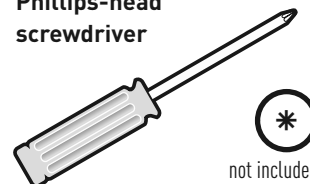

not included



These parts are
interchangeable:


DA 1 & 2

PL 1 & 2


HP all three

TOOLS REQUIRED: Hex Key (included) & Phillips-head Screwdriver (not included) • Follow the Assembly Steps in the order presented.


1 PIECES

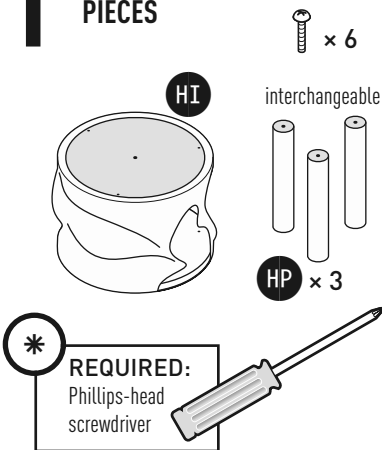

Insert the **hideaway posts** into the one-piece **hideaway** and stand them in their approximate positions.
Affix the posts in place with phillips screws.

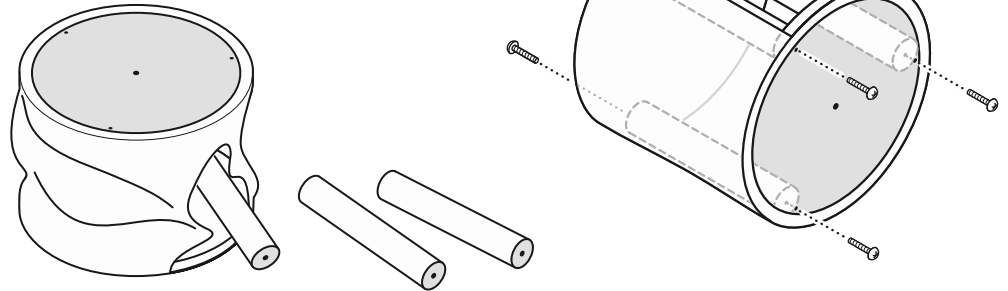


2 PIECES

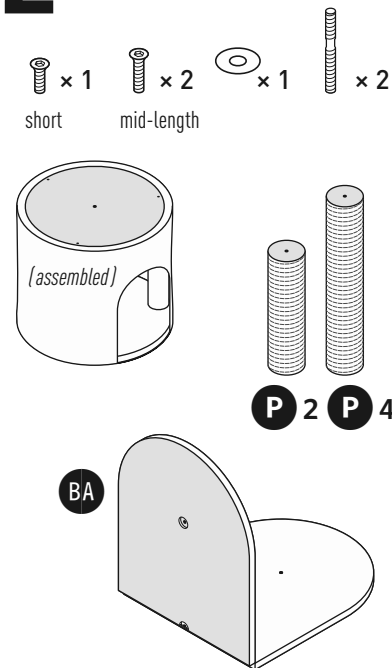



Affix the assembled hideaway to the **base** with the shortest hex screw.

Affix the hideaway-height **scratching post (P 2)** at the center fold, with a washer and mid-length hex screw.


Affix the tallest **scratching post** with the remaining mid-length hex screw.

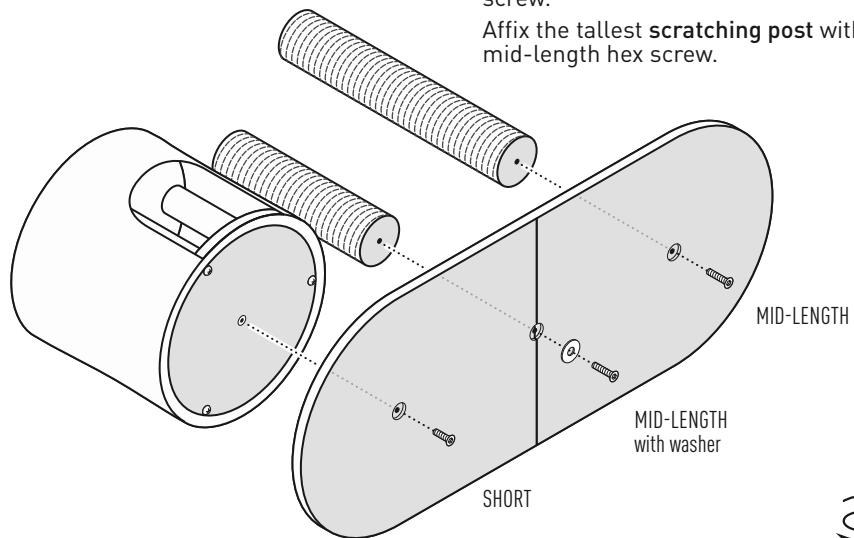



Set the **screw posts** into the ends of the scratching posts.

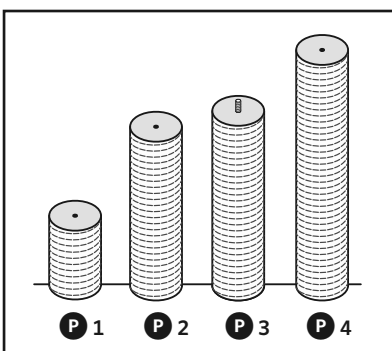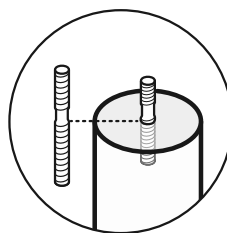


Scratching post size comparison chart

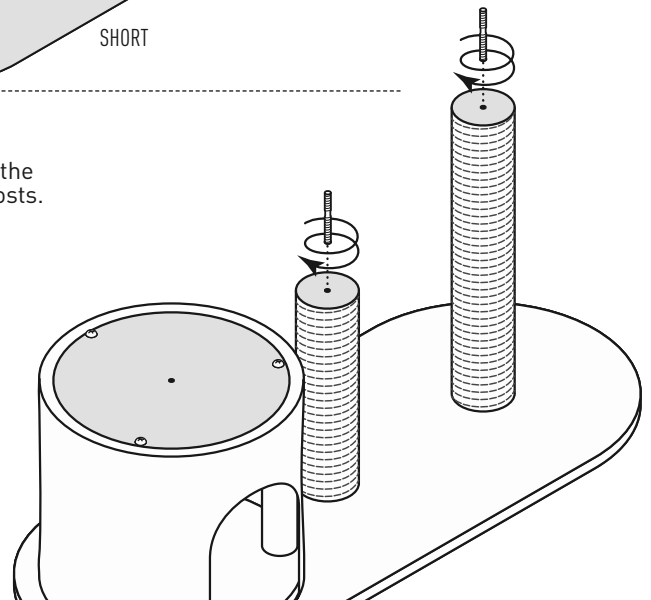

3 PIECES

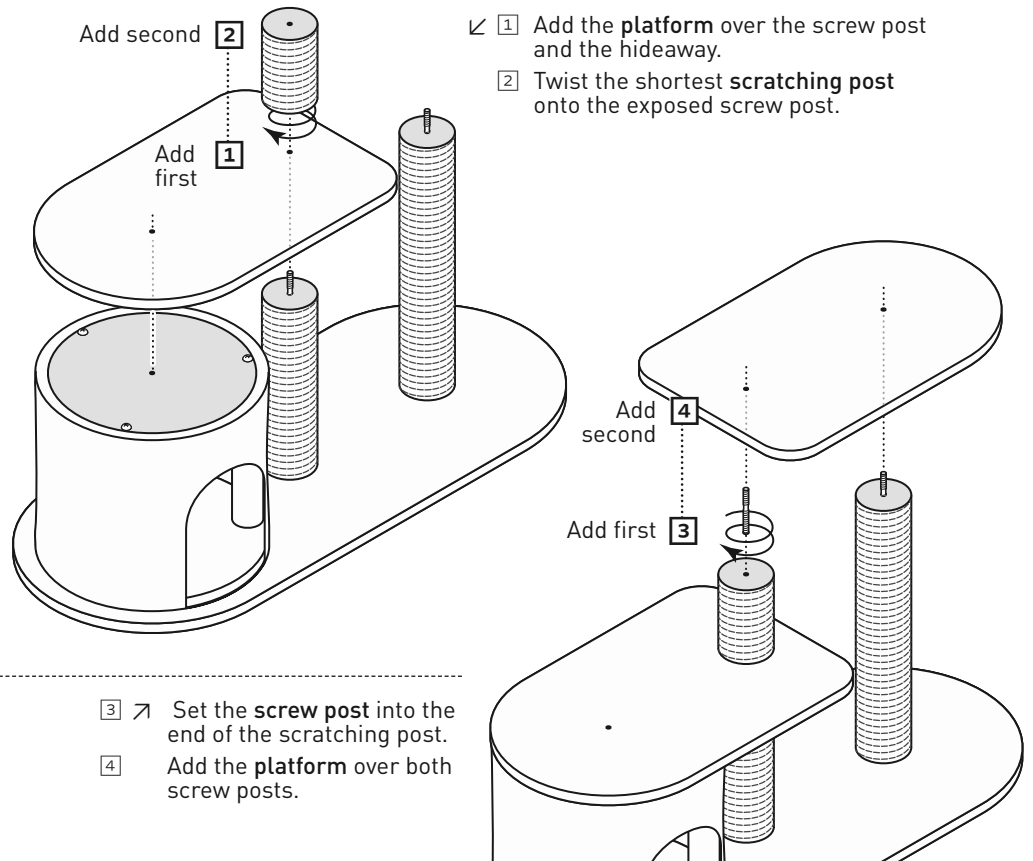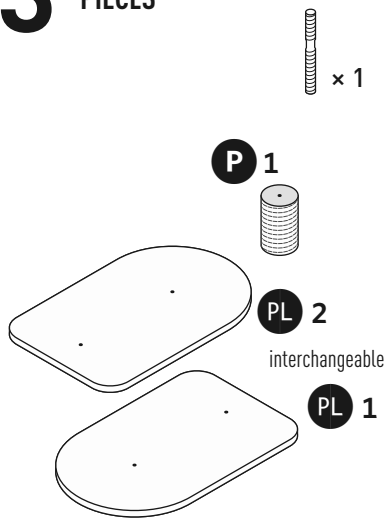


4 PIECES

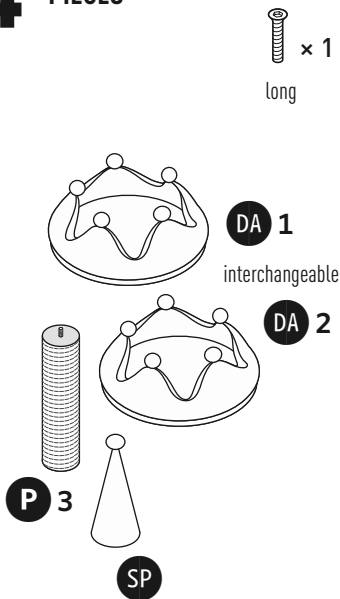

Spin the **daybed** onto the exposed screw post.

Affix the second **daybed** in place with the longest hex screw—up through the hideaway and platform.

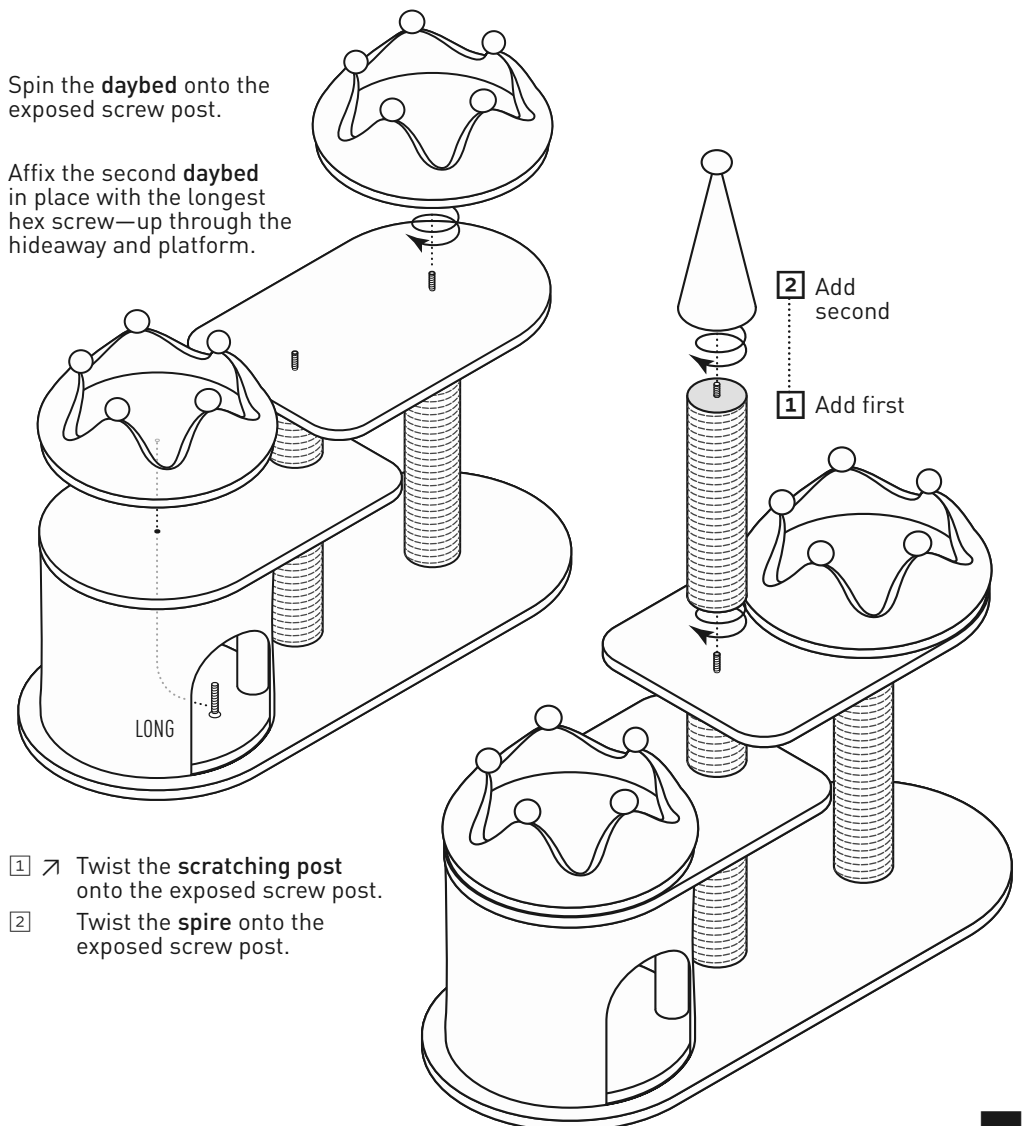

Assembly completed.