

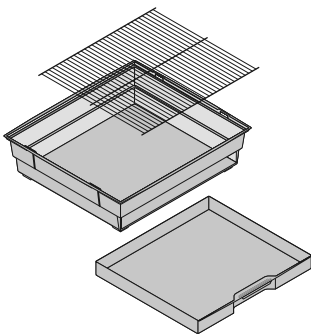


TOOL: Needle-nose pliers • For best results, follow the Assembly Steps in the order presented.


# 1 PIECES

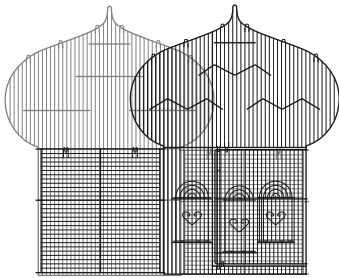

Unfold the cage body mesh.


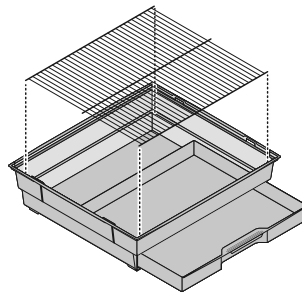


Prepare the **base** by placing the **grille** down into the base and sliding the **tray** in from the front.

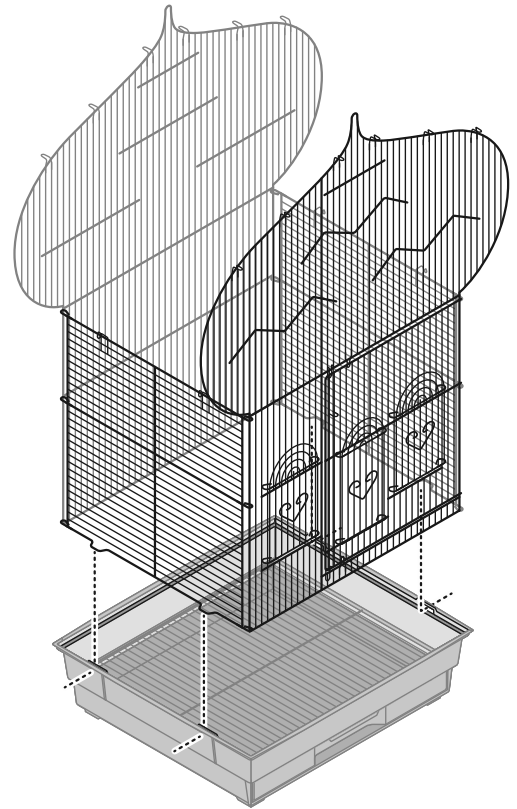


Set the **cage body** into the **base**, inserting the wire bump-outs into the openings in the base rim.


# 2 PIECES

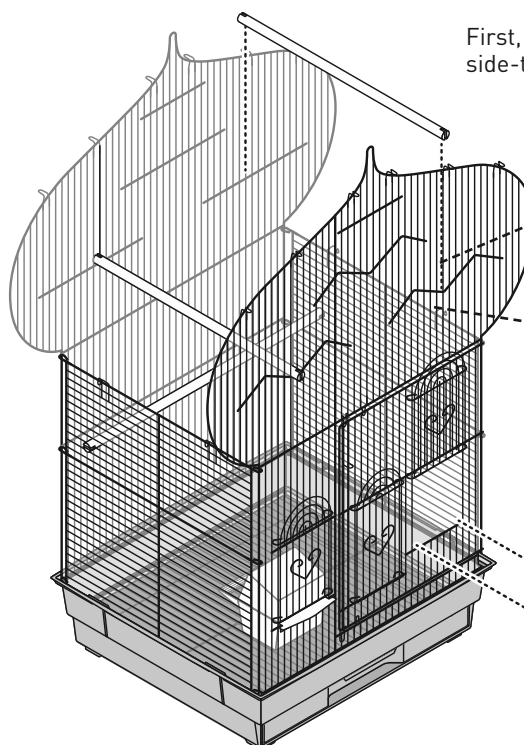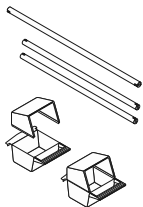

First, insert the **long perch** on horizontal wires from side-to-side across the cage at an even height.

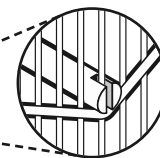



Insert the two **short perches** on vertical wires, front-to-back in the cage, and settled down onto the horizontal wires for stability.

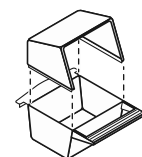

For each **cup**, push the hood of the cup down onto its base.

Slide the cup doors up to open and insert the cups.


# 3 PIECES

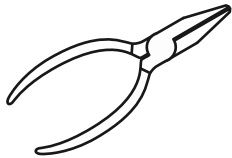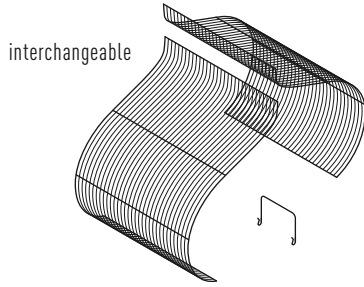


**1** Catch the left side **roof panel** under the hooked wires on the side panel.

**2** Rotate the roof panel up and catch the outer wires onto the extended wire hooks along each of the front and back panel roof lines.




Repeat the same steps for the right side **roof panel**.

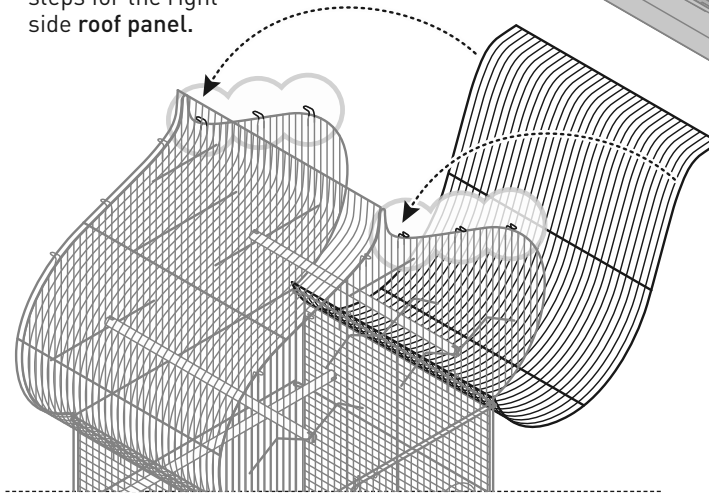

Center the handle on the roof.  
With the hooked ends of the handle, catch both roof wires together and hold the handle up tight.  
Crimp the hooked ends around the roof wires to hold the roof together and the handle in place.

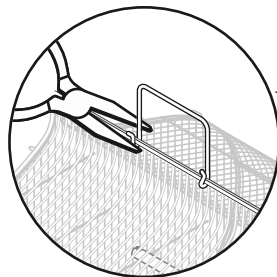

Crimp the hooked wires along the roof lines to secure the roof panels in place.

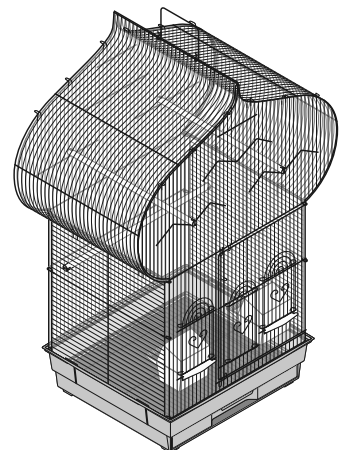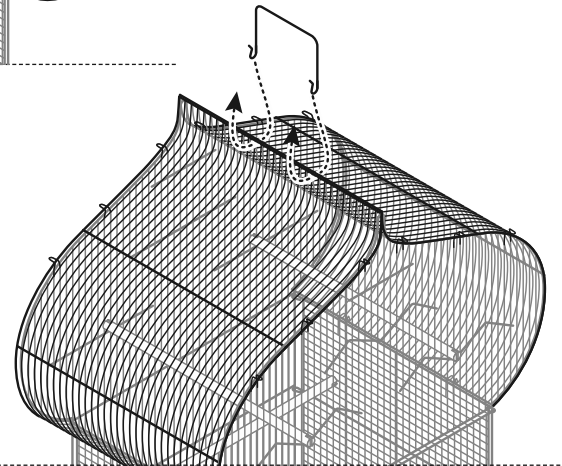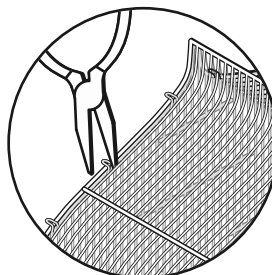

## CLEANING INSTRUCTIONS

To prolong the life of your new Prevue Pet Products cage, we recommend:

- When cleaning the cage and parts, use a soft cloth or non-abrasive scrub pad (such as Prevue's #109 Cage Saver).
- Wash all parts with warm water and a mild, pet-safe, environmentally friendly soap.
- Rinse thoroughly.
- Hand dry all parts completely with a soft dry cotton cloth before reassembling the cage.
- Do not leave plastic parts in the sun to dry as they may warp.

Assembly completed. ■