
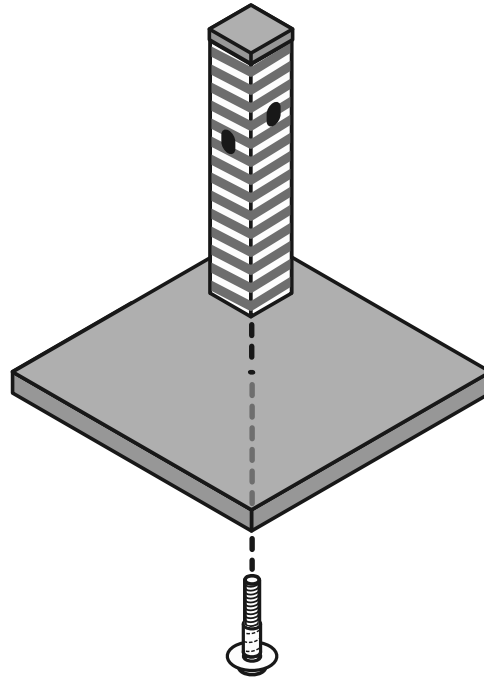




**NO TOOLS NEEDED** • For best results, follow Assembly Steps in the order presented.

**1** PIECES

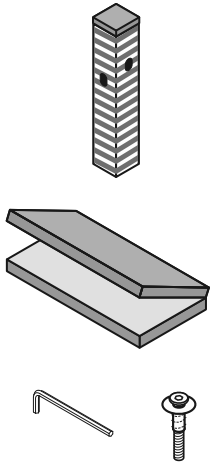


Unfold the base.  
Tighten the screw  
through the base and  
into the post.  
The metal sleeve on  
the screw will embed  
itself into the wood.

**2** PIECES

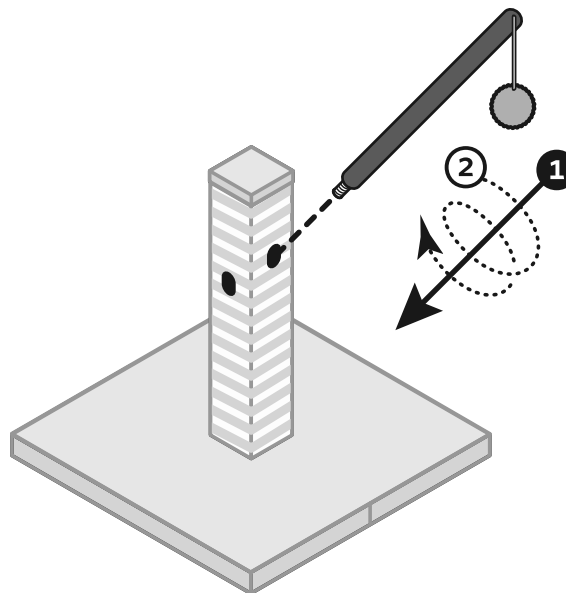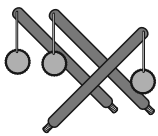

For each bounce 'n spring arm :  
① Insert the screw post into the  
threaded hole at an angle.  
② Screw securely into place.

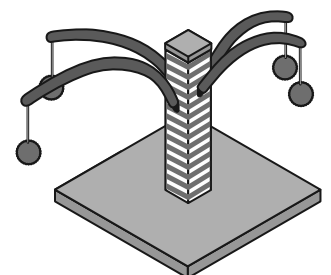

Assembly completed. ■