

Deluxe Chicken Coop

8–10 Hens

Model: # 466

read first

REVIEW BEFORE ASSEMBLY

- Tools (not included) are required for assembly. See below.
- For best results, follow steps in order
- Please follow the CARE ADVISORY to maintain product longevity

For assistance or replacement parts, please contact Prevue Pet Products:

PHONE 312.243.3624

ONLINE www.prevuepet.com










EMAIL customerservice@prevuepet.com

CARE ADVISORY: To maintain the longevity of your purchase, we recommend that you periodically treat it with a non-toxic sealant and protect it with a tarp or other covering during extended periods of inclement weather.

TOOLS REQUIRED

- Small rubber mallet or hammer for wood pegs
- Phillips-head screwdriver for all screws; if a power drill is used, do not overtighten.

HARDWARE INCLUDED

P	A	B	C	D	E	F	G	H
								
40ct	12ct	22ct	16ct	8ct	2ct	32ct	24ct	36ct

KEY TO HARDWARE SYMBOLS

P = wood pegs (Steps 1, 3, 4)

A = 2 9/16" wood screw (Steps 3, 4)

B = 2" wood screw (Steps 1, 4)

C = 1 5/8" machine screw (Step 2)

D = nut (Step 2)



E = 5/8" wood screw (Step 3)

F = 1 3/8" wood screw (Step 5)

G = 1 1/8" wood screw (Step 5)





H = 1" wood screw (Step 5)

1 To assemble the **MAIN COOP HOUSE**, you will need these pieces:





× 24

Tap wood pegs [P] into predrilled holes indicated by the ♣ symbol.

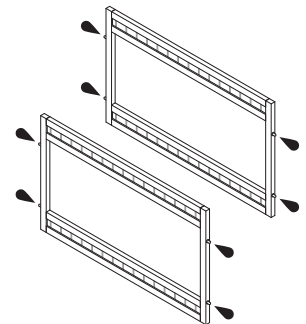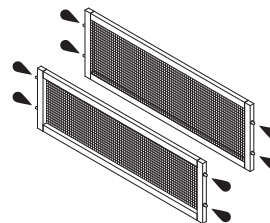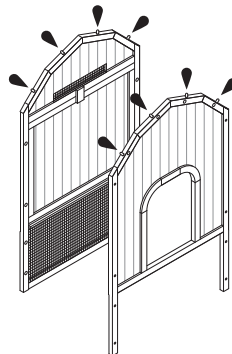

× 16

Align wood pegs with the predrilled holes and attach panels with [B] wood screws.

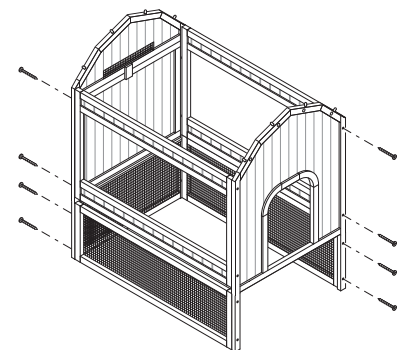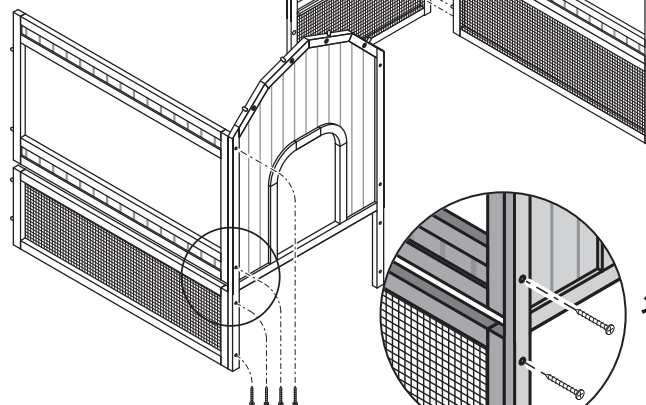


NOTE: The lower left panel is shorter than the right.



NOTE: The shorter lower left panel will leave a gap to allow for the coop floor tray (Step 2).


2

To assemble the **NEST BOXES** and install the **COOP FLOOR TRAY**, you will need these pieces:




× 8
(4 each side)


Attach nest box ends with **[C]** machine screws into threaded anchors.

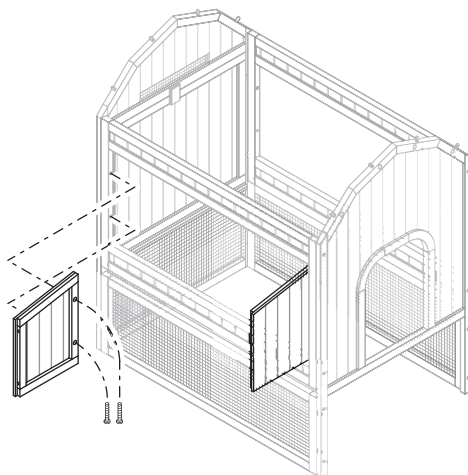

*NOTE: For Nest Boxes:
Hardware, Parts, and Assembly
is the same for both sides*

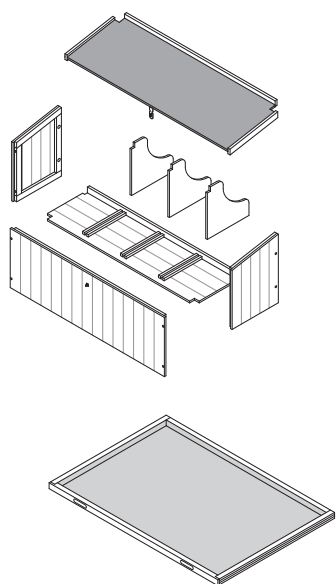


Insert nest box floor,
then insert dividers.



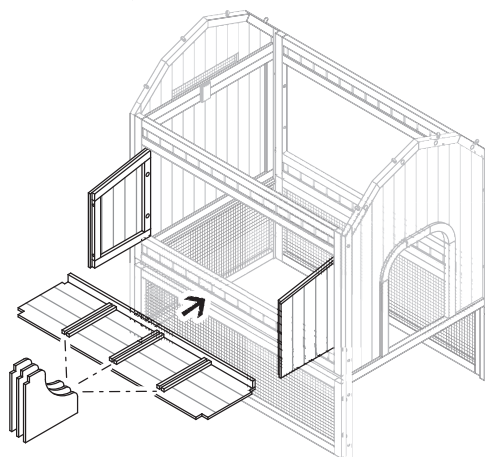


× 8 pair
(4 each side)



Attach nest box side
with **[C/D]** machine
screw/nut pairs.

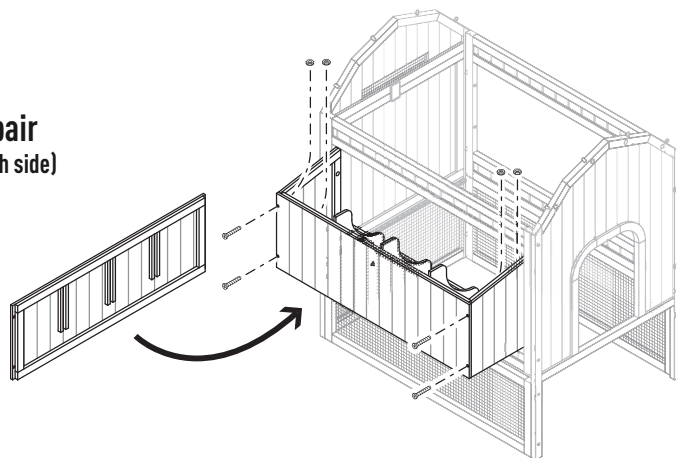

Finish each nest box by inserting
the roof. Roof is completely
removeable but can be secured with
a padlock (not included).

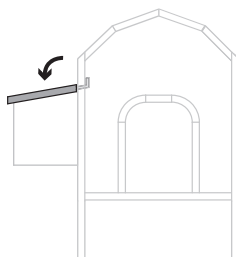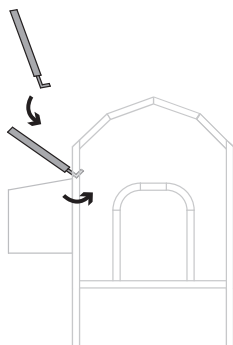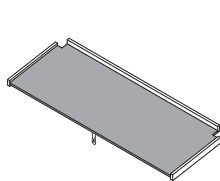


Insert the
coop floor tray.

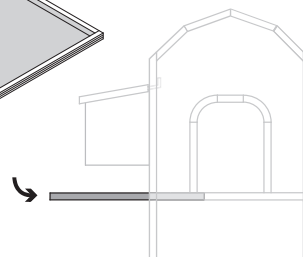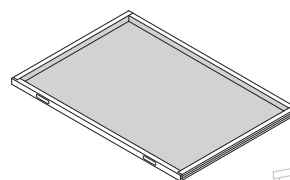


3

To install the **PERCH BARS**, **ROOF EXTENDERS**, and **COOP RAMP**, you will need these pieces:

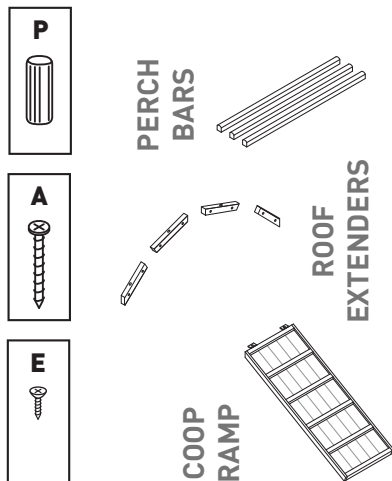

PERCH BARS

Insert the roosting perch bars.


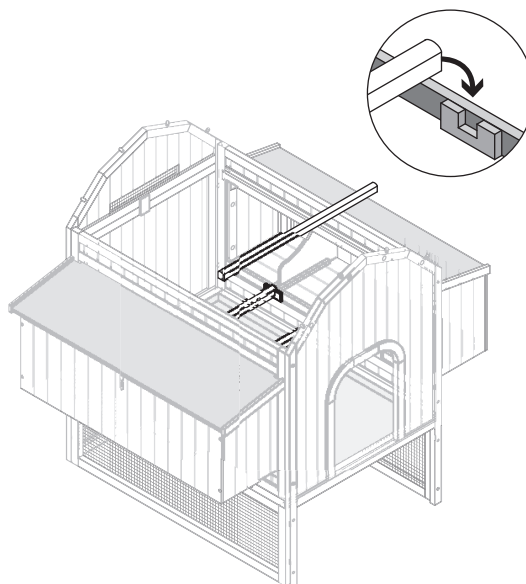


ROOF EXTENDERS




× 8

Tap wood pegs **[P]** into predrilled holes indicated by the ▼ symbol.

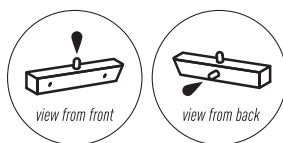

× 8

Align the wood pegs in the roof extenders with predrilled holes on coop door frame. Attach with **[A]** wood screws.

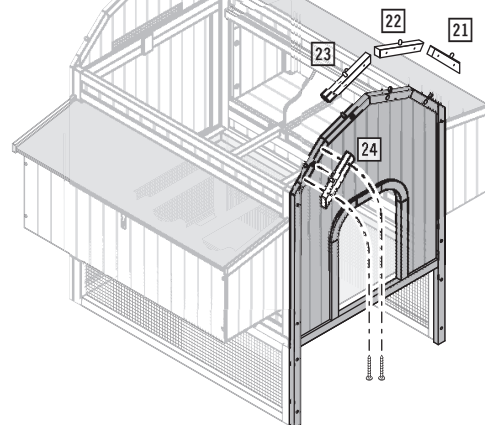


COOP RAMP







× 2

Attach the coop ramp with **[E]** wood screws.

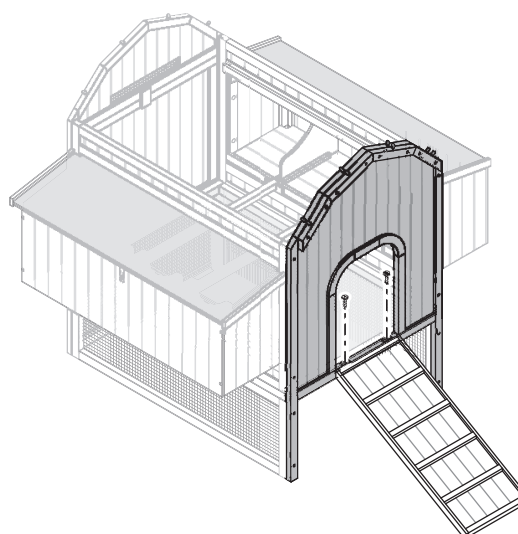

4


To assemble the **CHICKEN RUN**, you will need these pieces:

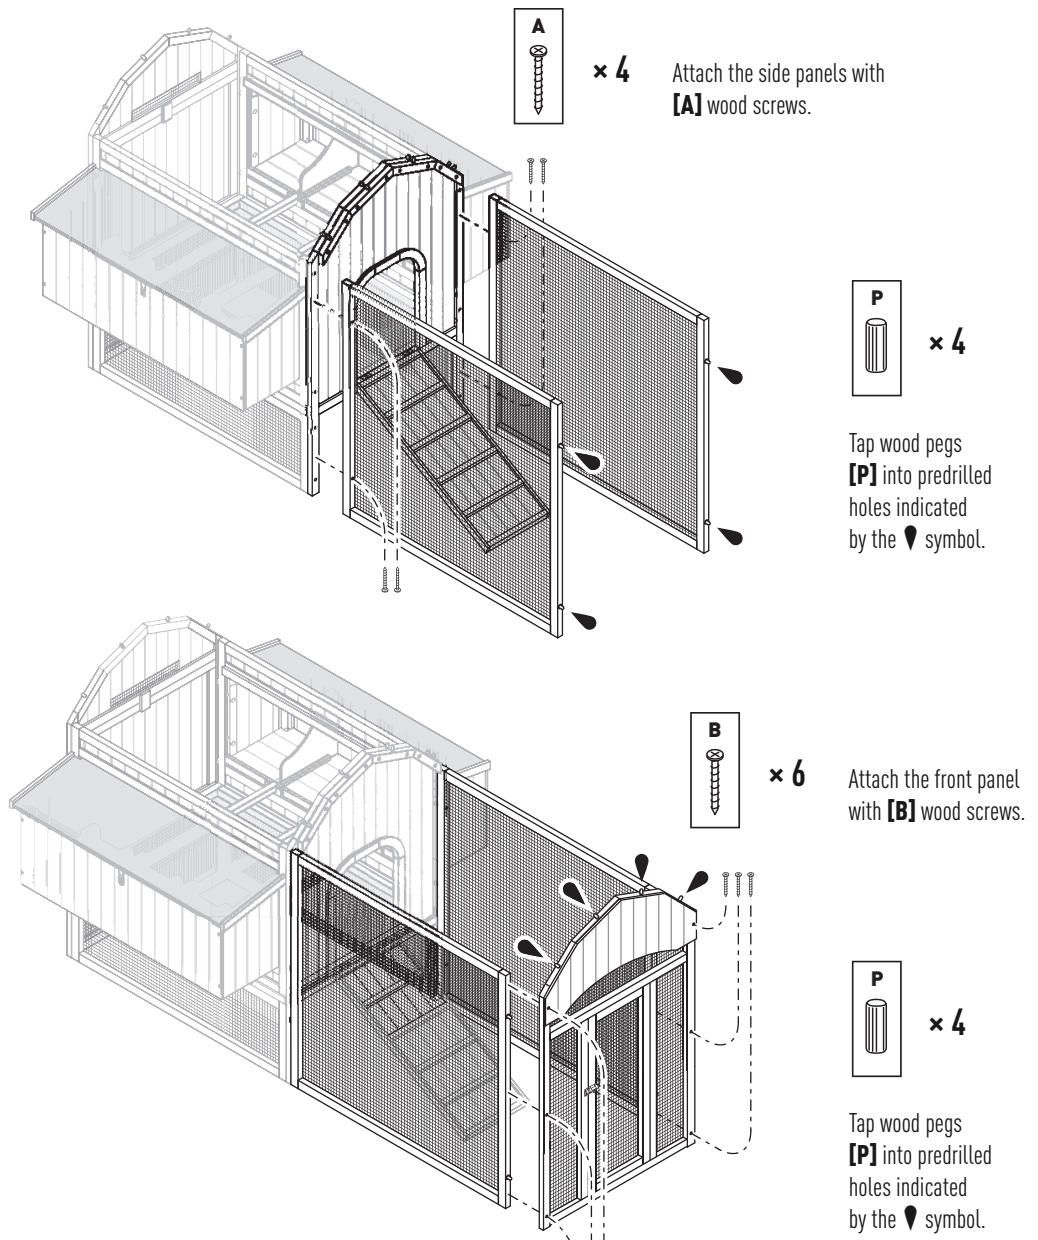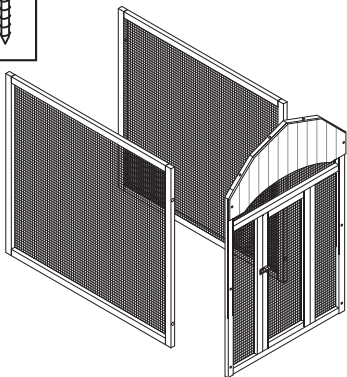

5^a



Before you assemble the **ROOF**, please note:

NOTE: For all roof panels (underside view):

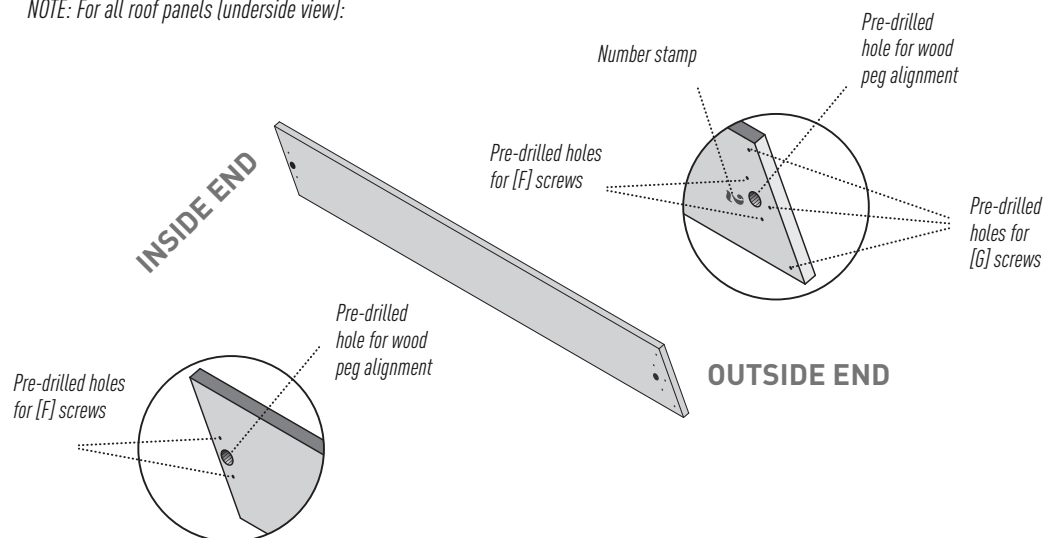


5^b

To assemble the **ROOF**,
you will need these pieces:

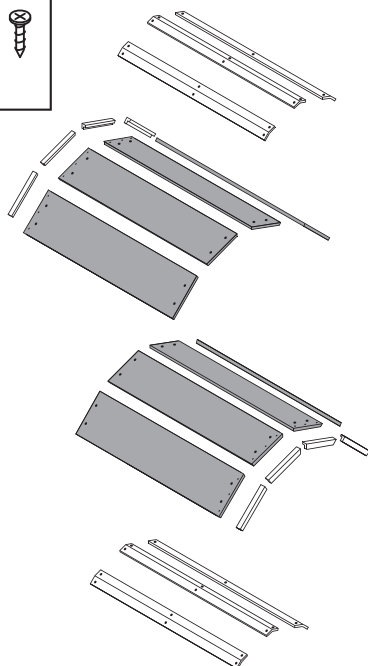


× 24

Attach the roof
trim with **[G]**
wood screws.

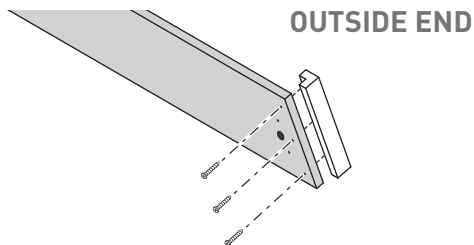



OUTSIDE END

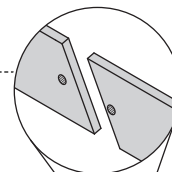

INSIDE ENDS


Lay all roof panels in
place before attaching.

Numbers have been
stamped onto the wood
to guide the order. Align
the predrilled holes in
the roof panels with wood
pegs along the roof line.

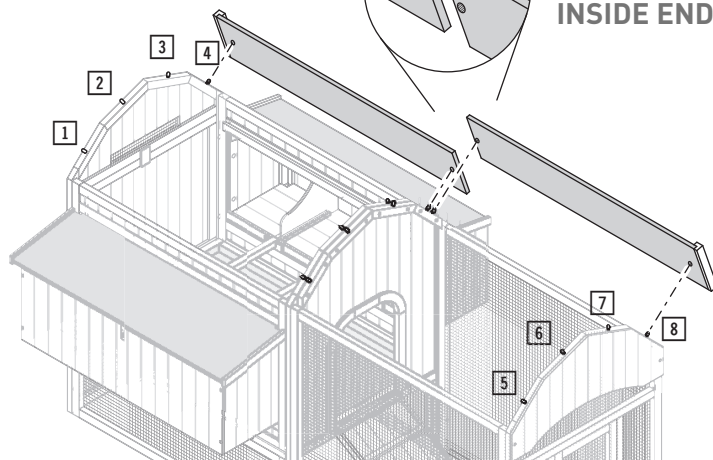


× 32

Attach the roof panels
with **[F]** wood screws.

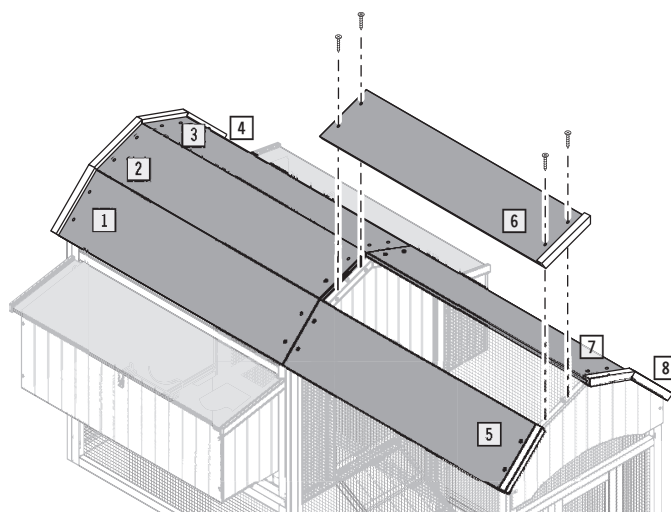

× 36

Lay roof trim in place
first, then attach with
[H] wood screws.

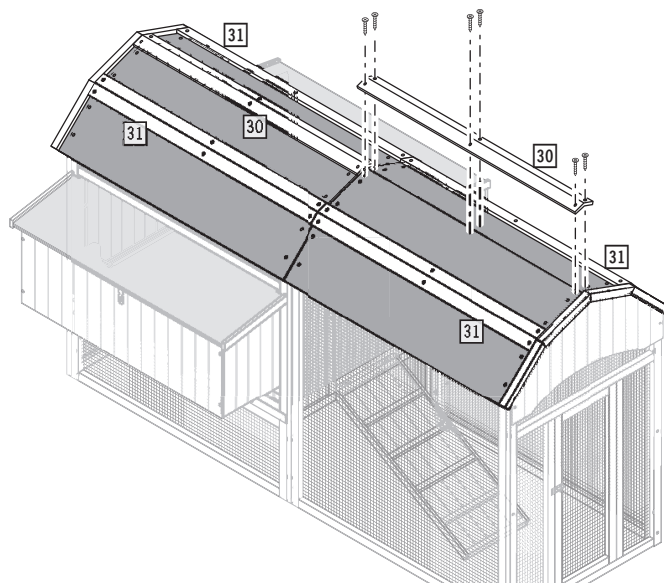

Your Deluxe Coop is
now fully assembled
and ready for use.